


flex SCADA

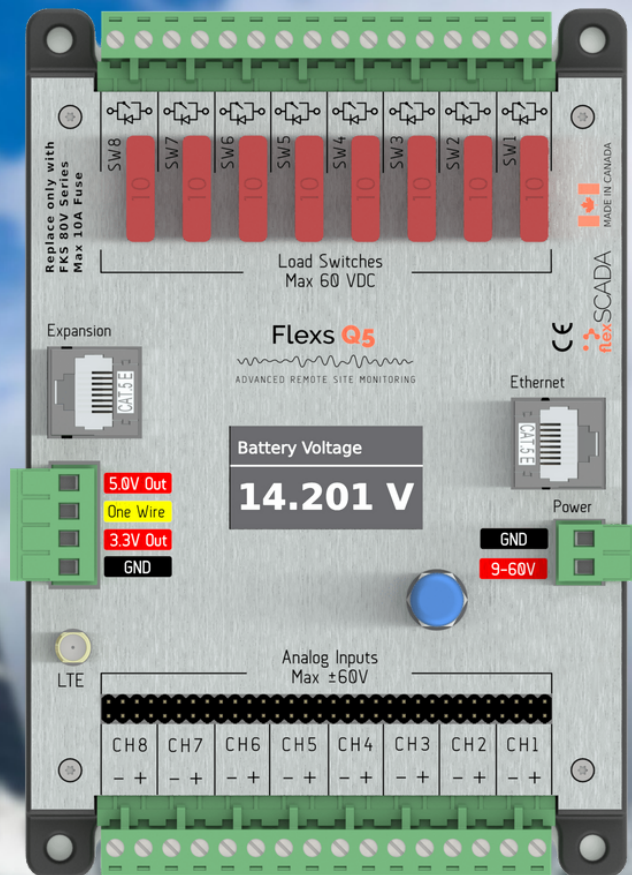

FlexsQ5 / Q5 Pro

ADVANCED REMOTE SITE MONITORING

Rev: 3.5 Updated: 2019/12/16 Firmware: V84

USER GUIDE

TABLE OF CONTENTS

GOT QUESTIONS?

Can't find what you're looking for?
We love hearing from our customers!
Please contact us with any questions.

CONTACT

+1 877.352.7398
support@flexscada.com
www.flexscada.com
P.O. Box 277
Lytton, B.C. V0K 1Z0
Canada

CONTENTS

Section 1.0: Hardware Specifications
Section 1.1: What's included
Section 1.2: Getting Started
Section 1.3: Web Interface Overview
Section 1.4: Main Menu
Section 1.5: Visualization Menu
Section 1.6: Input Graphing
Section 1.7: Input Oscilloscope
Section 1.8: Device Options Page
Section 1.9: Ping Probes Page
Section 1.10: Network Page
Section 2.0: Analog Inputs
Section 2.1: Voltage Inputs
Section 2.2: Current Inputs
Section 2.3: 1-wire sensors
Section 2.5: AC Power Metrics
Section 3.0: Relay Configuration
Section 4.0: Scripting
Section 5.0: SNMP
Section 6.0: Device Firmware Updater
Section 7.0: Device Interface
Section 8.0: Expansion Interfaces
Section 9.0: Warranty Terms

GLOSSARY

1-wire/one-wire - a sensor protocol developed by Dallas Semiconductors
A - Amps (Unit of Current)
AC - Alternating Current
AVG - Average
Bit - The smallest possible amount of data: 0 or 1
Bool or Boolean - true or false, usually represented with a single bit
Byte - 8 bits
CH - Channel
CT - Current Transformer
DC or VDC - Direct Current
DFU - Define Firmware Updater
DHCP - Dynamic Host Configuration Protocol
DNS/NS - Domain Name Service (server that converts names to IPs)
FET - MOSFET (Type of semiconductor switch)
FW - Firmware
Floating Point - Any non-whole number
HTTP - HyperText Transfer Protocol
HTTPS - Secure HyperText Transfer Protocol
HVD - High Voltage Disconnect
HW - Hardware
Hz - Hertz (Cycles per second)
I2C - Communication protocol
INS - Instantaneous Value
IP - Internet Protocol v4
IPv6 - Internet Protocol v6
IoT - Internet of Things
JSON - JavaScript Object Notation
kSPS - Thousand Samples Per Second
LAT/LNG - GPS Latitude/Longitude (Decimal Degrees Format)
LTE - 4G Cellular Service
LVD - Low Voltage Disconnect
MAC - Media Access Control
mA - Milliamps (1000th of an Amp)
mJ - Megajoules
MODBUS - Communication protocol used for Industrial PLC's
Mbps - Megabits Per Second
NTP - Network Time Protocol
Ohms - Unit of Impedance
PF - Power Factor
PING or ICMP - Internet Control Message Protocol
PoE - Power Over Ethernet
RMS - Root Mean Square
SLAAC - IPv6 Stateless Address Autoconfiguration
SNMP - Simple Network Management Protocol
SW - Switch
Subnet/Netmask/NM - Refer to Internet Protocol
TCP - Transmission Control Protocol
THD - Total Harmonic Distortion
TX - Transmit
UART - TTL Level Serial
UID - Unique Identifier
V - Volts
VDC - Volts DC
VT - Voltage Transformer
W - Watt (Unit of Power)

1.0 - Hardware Specifications

PHYSICAL

Dimensions: 157 mm x 108 mm x 40 mm (Mounting Holes: 96 mm x 144 mm - 4 x 3mm)

Also mount with standard DIN Rail - Recommended DIN Rail space: 120 mm

Temperature Rating: -40 to 85°C (industrial rated components)

Environment: Max 95% relative humidity, non-condensing (ETSI300-019-1.4 Standard)

Weight: 200g

POWER REQUIREMENTS

Voltage: 9 - 60 VDC (reverse polarity protected)

Power Consumption: 0.6 W @ 12V Typical (varies based on configuration)

ANALOG INPUTS

Analog Conversion: 24 bit; 0.05 mV @ ± 60 V range; 0.004 mV precision @ ± 5 V range

Voltage Range: ± 60 V (fully differential, bi-polar) (0.5 M Ω . Imp)

Current Range: 0 - 25 mA (requires hardware jumper change)

LOAD SWITCHES

Max Voltage: 60 VDC

Max Current: 8 A Max Cont (100 A Surge < 1 ms) (50% derating above 50° C)

Switch Type: Isolated solid state N-Channel FET /w fly-back protection

Fusing: ATO blade style fuse (replace only with fuses rated for correct voltage range)

Software Fuse: 500 mA to 5 A ***PRO ONLY***

Current Sensing: 0 to 5 A ***PRO ONLY***

REGULATED OUTPUTS

5.0 V output: 500 mA Max

3.3 V output: 500 mA Max (Typ 3.47V)

3.3 V Output /w LTE Module: 150 mA Max (Typ 3.47V)

ETHERNET

- 10/100 Mbps Operation
- Long-Range 300 Meter at 10 Mbps
- IEEE 802.3az Energy Efficient Ethernet
- ± 15 kV IEC 61000-4-2 Level 4 ESD Protection
- IEEE 802.3 Auto-Negotiation
- IPv4: DHCP, Static; IPv6: SLAAC, DHCPv6, Static
- Passive PoE: Pins 4, 5+; 7, 8- @ 9 to 56V

LTE SPECS ***LTE VERSION ONLY***

- LTE CAT-M1/NB-IoT 3GPP release 13 LTE Adv. Pro
- SMA Connector: SMA-Female
- LTE Bands: 2, 3, 4, 5, 8, 12, 13, 20, 28
- Modem: ublox SARA-R410M-02B
- Certified by: FCC, ISED, PTCRB, NCC, RCM, RED, AT&T, Telus, Telstra, Verizon, GITEKI 2

1.1 - What's Included

- 1 x Flexs Q5
- 1 x DIN Rail Mounting Kit
- 1 x Product Manual


1.2 - Getting Started

This section provides a brief overview on how to connect to a FlexsQ5 for the first time.


Attach the Q5 to a power source (9 to 60 VDC) using the two pin power terminal located beside the Ethernet port. The Q5 can alternatively be powered via POE over the Ethernet port.

DO NOT POWER THIS DEVICE DIRECTLY FROM AN AC POWER SOURCE! DOING SO WILL VOID YOUR WARRANTY!


Powering with a DC Power Supply

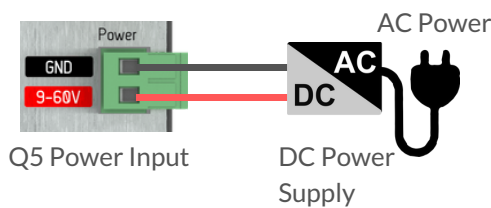

Powering with a Battery

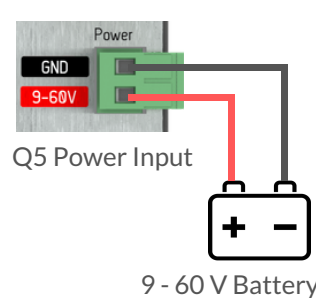


Powering with a Passive PoE

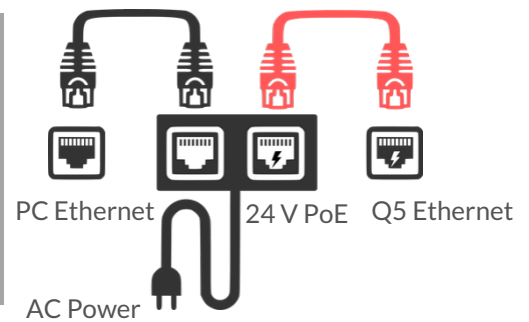

Once power is connected, the Q5 display will illuminate indicating that the Q5 has successfully started.

The Q5 will then search for a router on the network to get an IP address. If the Q5 fails to find a router within the first 10s of bootup, it will fallback to standalone mode. In standalone mode, the Q5 will use the fallback IP (default 192.168.1.20).

Network Connected Mode

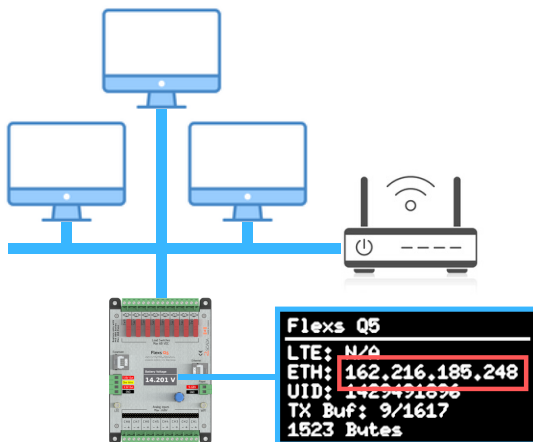

Connect using the IP assigned by your network.
This IP can be found on the Q5 display
(highlighted in red above)

Standalone Mode




Connect using the following addresses:
<http://192.168.1.20> OR with IPv6
[http://\[fe80::744\]](http://[fe80::744])

Using Chrome, Firefox or Safari enter the device IP in the address bar to load the Q5's web interface.

The default password for the device is "flexscada".


IT IS HIGHLY RECOMMENDED TO CHANGE THIS PASSWORD WITH A SECURE PASSWORD TO AVOID UNAUTHORIZED ACCESS TO THE DEVICE.


1.3 Web Interface Overview

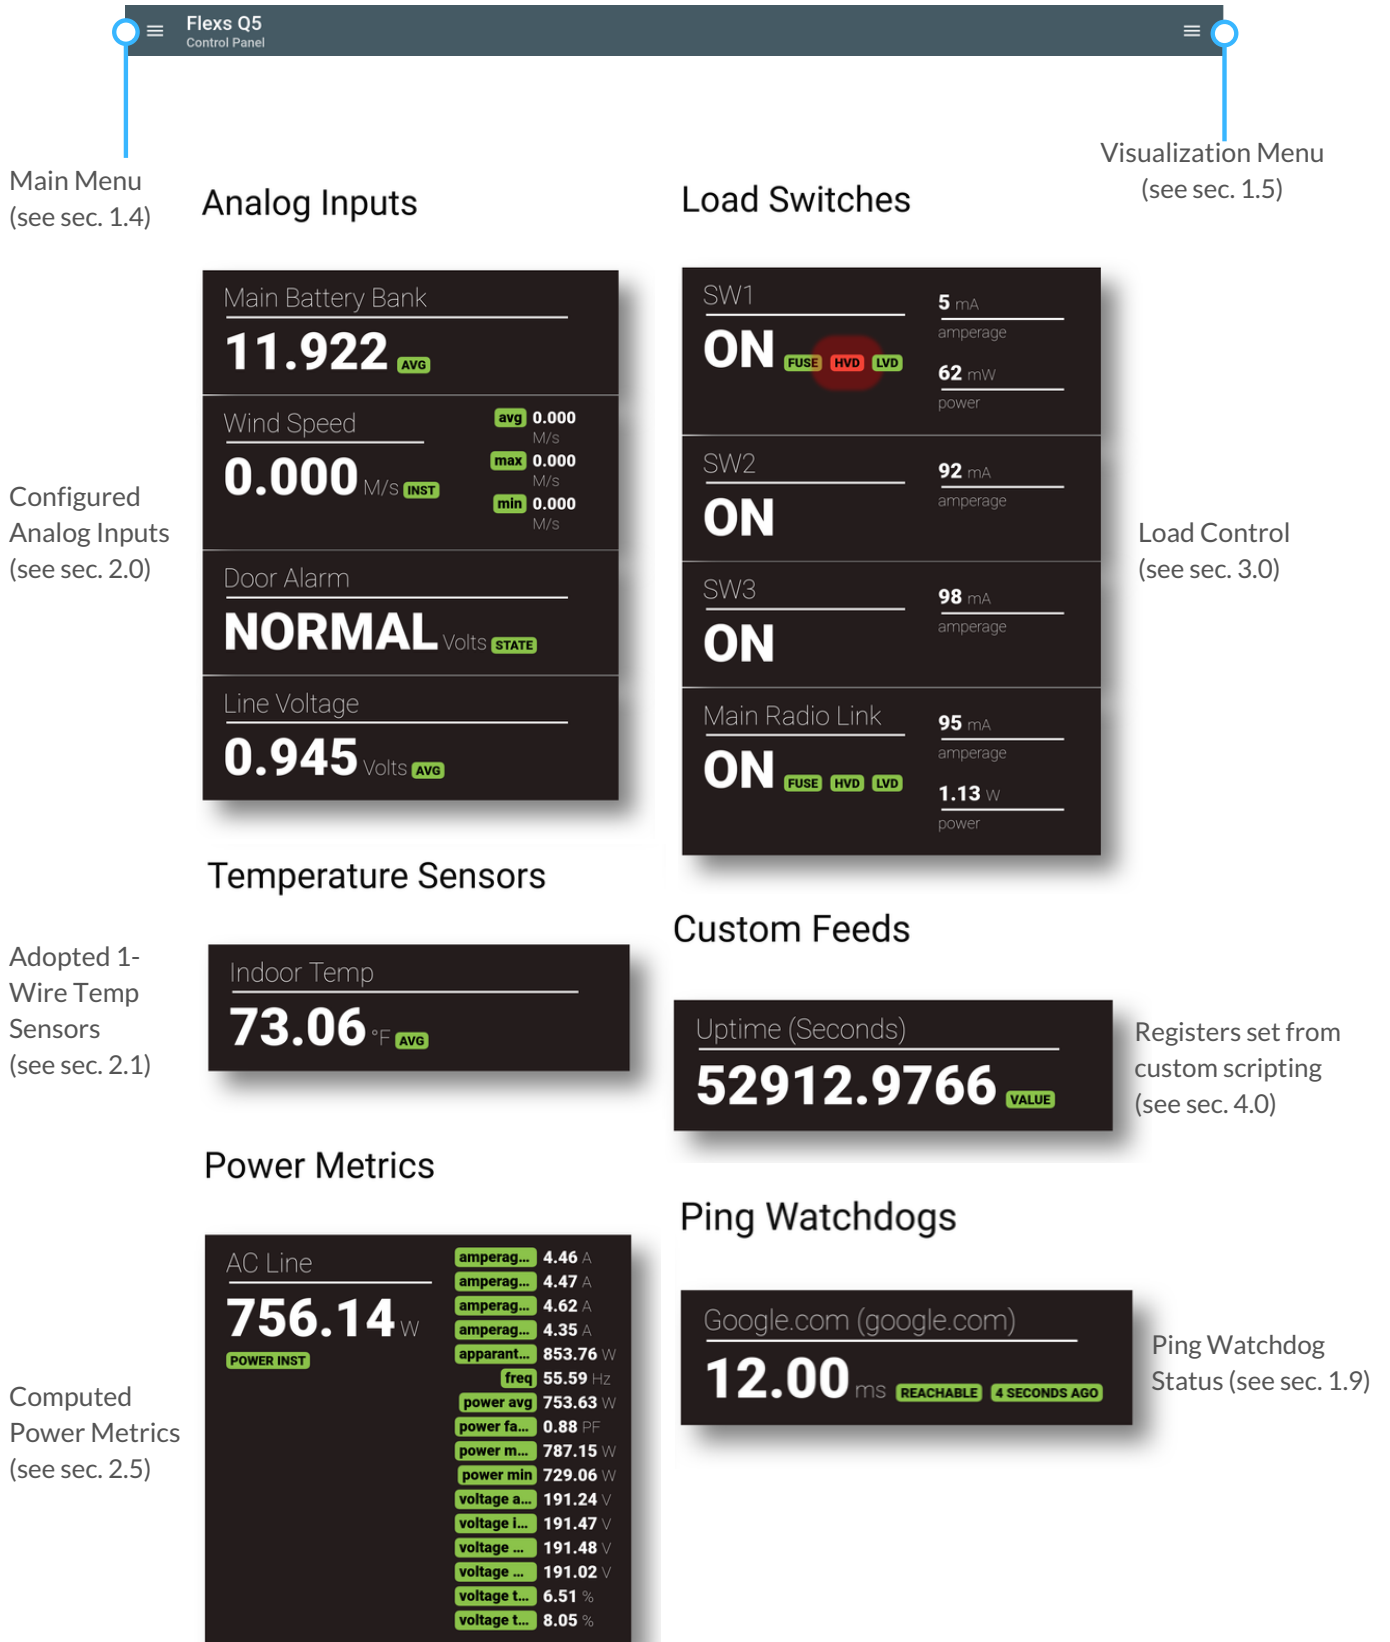



1.4 - Main Menu


Expert Mode - Disabled


 **Overview**
Device Information


 **Device Options**
Basic Device Configuration


 **Analog Inputs**
Configure Analog Inputs

 **Relay Configuration**
Configure Load Switches


 **Temperature Sensors**
Configure Temperature Sensors


 **Networking**
Network Configuration

 **Pinging**
Setup Ping Probes

 **Power Metrics**
Calculate Watts, PF, etc.

Actions

 **Apply Configuration**
Safely Apply Configuration

 **Logout from this device**
Logout

☐ **Expert Mode**

Device Details

UID: 1429491896

FW: V63 Built On Dec 13 2018 21:01:...

HW: Flexs Q5 Pro

Dashboard Page
(see sec. 1.3)

Device Options Page
(see sec. 1.8)

Analog Inputs Page
(see sec. 2.0)

Load Outputs Page
(see sec. 3.0)

1-Wire Sensors Page
(see sec. 2.3)

Networking Page
(see sec. 1.10)

Ping Watchdog Page
(see sec. 1.9)

Calculated Power Metrics
(see sec. 2.5)

Custom Feeds (see sec. 4.0)

Custom Scripts (see sec. 4.0)

System Log Page

Expert Mode (disabled)

Safely Apply Settings
(user must confirm after saving.)

Save and apply settings
(without confirm option)

Logout


Expert Mode (enabled)


Unique Device ID (UID)


Firmware Version


Hardware Type


Expert Mode - Enabled


 **Overview**
Device Information


 **Device Options**
Basic Device Configuration


 **Analog Inputs**
Configure Analog Inputs


 **Relay Configuration**
Configure Load Switches


 **Temperature Sensors**
Configure Temperature Sensors


 **Networking**
Network Configuration

 **Pinging**
Setup Ping Probes


 **Power Metrics**
Calculate Watts, PF, etc.


 **Custom Feeds**
Setup Custom measurements


 **Logic**
Logic Scripting

 **Log**
View Device Log

Actions

 **Apply Configuration**
Safely Apply Configuration

 **Save & Apply Configuration**
Force Save And Apply Configuration

 **Logout from this device**
Logout

☒ **Expert Mode**


Device Details


UID: 1429491896


FW: V63 Built On Dec 13 2018 21:01:...


HW: Flexs Q5 Pro


1.5 - Visualisation Menu


Dashboard Page (see sec. 1.3) — 


Input Graphing Page (see sec. 1.6) — 


Cache Graph Page (see sec. 1.6) — 


Input Oscilloscope Page (see sec. 1.8) — 


Memory Card (see sec. 8.0) — 

Advanced Device Info — 

Data Update Interval — 

View Load Watts (PRO ONLY) — 

Load Distribution (PRO ONLY) — 

Manually Zero Load Sensors (PRO ONLY) — 

Visualization Menu

Feeds
View Realtime Measurements

Realtime Graphing
Visualize feed values over time

Historical Plots
Visualize measurements stored in the onboard cache

Scope
Oscilloscope analysis of analog inputs

Memory Card
Manage recorded datalogs

Device Status
Advanced Device Information

Update Interval
Every 1 Second

Load Distribution


SW1 Main Radio Link
SW5 SW6 SW7
SW8



Main Radio Link: 1.14 Watts



Calibrate
Zero the relay amp sensors

1.6 - Input Graphing Page

Line Voltage.voltage inst

Update Interval
Every 250mS —  Data Update Interval

 Pause Graphing —  Pause/Start Data Collection

 Clear Graph —  Clear Graph Of All Data

Filter


☐ Load Relays

☐ Analog Inputs

☐ Temperature Sensors

☒ Power Metrics

☐ AC Line

☒ Line Voltage —  Select Data Metrics to Graph

freq 56.3412

voltage avg 217.5385 V

☒ voltage inst 217.8548 V


The graphing tool is used to view short term trends, such as current or voltage readings. The Update Interval range can be configured from 100ms to 1 minute.

Cache Graph Page


The internal memory is used to cache measurements when the device is unable to upload data to our cloud server or when the device is operating in standalone mode.

Note: The Q5 does **not** have an internal battery to keep cached measurement data or system time between power failures. When operating in standalone mode the NTP server field in the *Device Options* page must be set. We recommend using our cloud service, SNMP or some other offsite method for long term measurement data storage.

WARNING! REMOVING POWER WILL CAUSE LOSS OF ALL LOCALLY CACHED DATA!

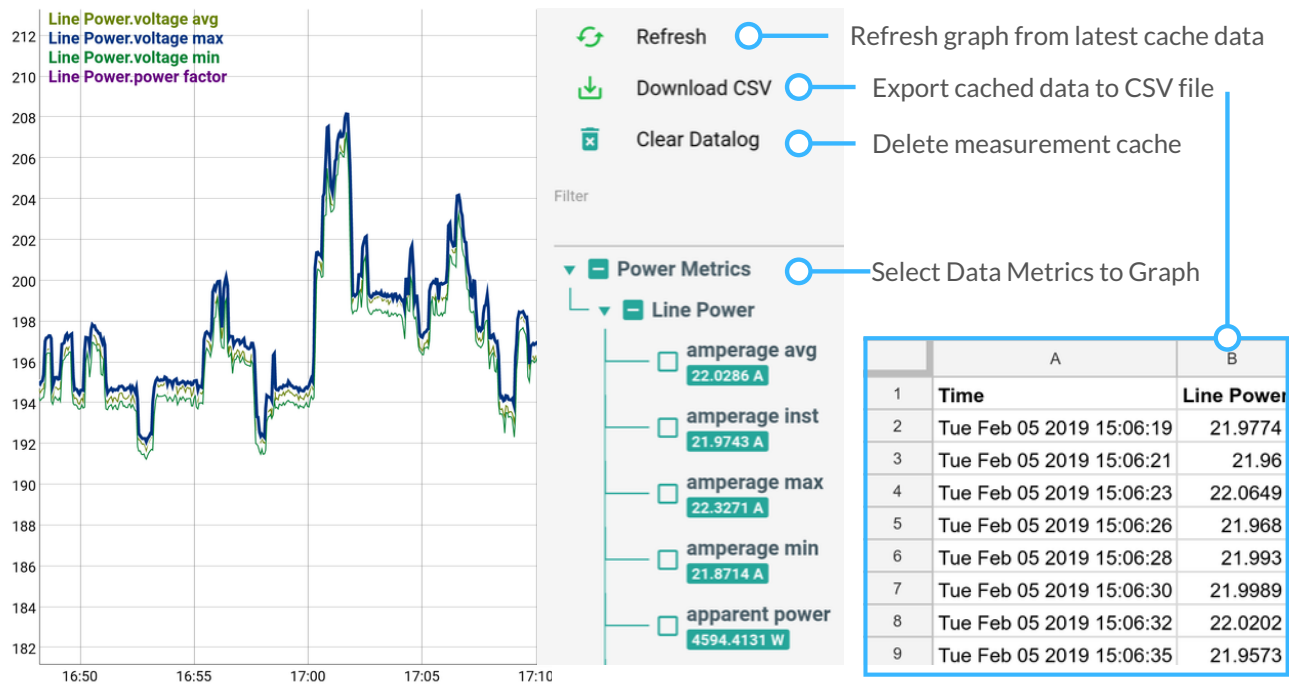

1.7 - Input Oscilloscope Page

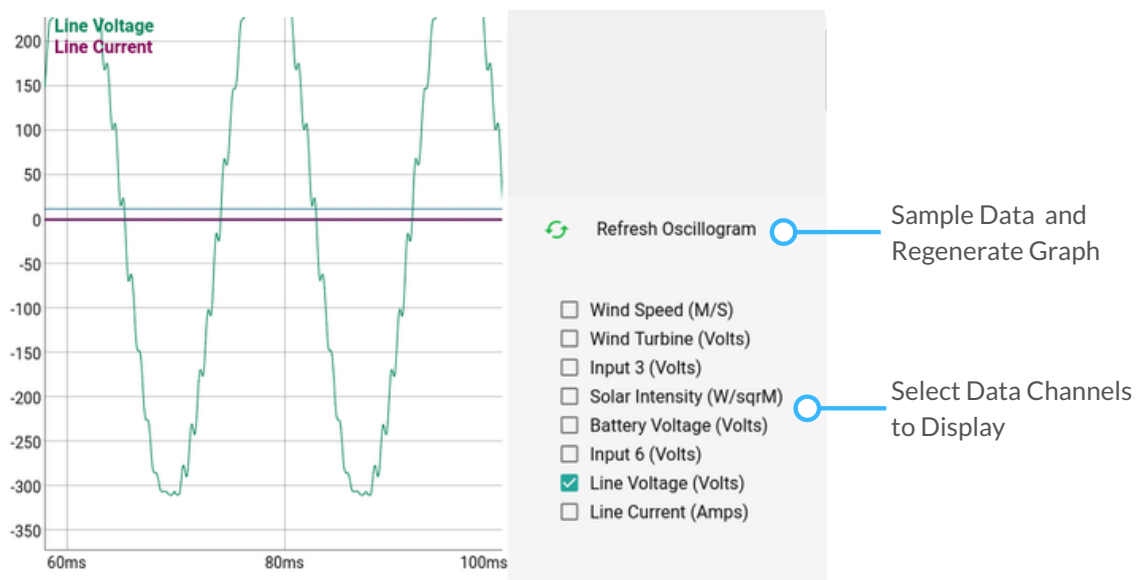

The oscilloscope tool provides a close-up look at how "clean" your power source is.

When the refresh button is clicked, 2,000 simultaneous readings are taken across all 8 channels and then displayed in the web interface. The sample rate of the Q5 is 8,000 samples/second (i.e. 8 samples taken each millisecond).

1.8 - Device Options Page

Device Name and Description are displayed in the cloud platform. These are useful when searching for a device.

Device Name

Flexs Q5

Description of this device

Description

Coordinates will autofill when a GPS module is attached.

GPS (Lat)

GPS (Lng)

Unit System

Unit System

Metric

Event logging level

Log Level

Errors Only

CPU Clock Speed

Power Scaling

Balanced (approx 500mW)

Transmit measurements to cloud at this interval. Also used for avg, min and max values on the dashboard.

Measurement Interval

Every 10 Seconds

Measurements will be taken on this interval and queued for transmission to the cloud at the Cloud Sync Interval

Sync configuration data with cloud at this interval. If disabled NTP field will show below.

Cloud Sync Interval

Every Minute

Device connects with the cloud at this interval to upload queued measurements and to check for any pending commands such as changes or software updates.

Default address - change this only when running customer hosted cloud software.

Cloud Server Address

http://iot.flexscada.com:7001

The cloud server address is the server that the Flexs Q5 syncs with to upload measurements.

If you are using FlexSCADA's cloud hosting you'll use http://iot.flexscada.com:7001, otherwise you'll use your own hosting address.

Log measurements to Memory Card

Memory Card Logging

Recording enabled at measurement interval

Data will be logged in .CSV format at the configured measurement interval with a new file created every month.

To avoid overly large data files which may be difficult to open, we strongly recommend increasing the measurement interval to at least 10 minutes.

Memory card utilization can be seen from the 'Device Info' tab of the visualization menu.

☐ Log config changes to memory card

This option will store a copy of the configuration to the Memory Card each time it is changed.

Use with caution as the configuration file may contain sensitive or private information which could then be obtained via physical access.

Cloud Sync Interval

Disabled

If *cloud sync* is disabled for standalone use, the *NTP server* field should be set to keep the device clock set.

NTP Server Address

pool.ntp.org

CHANGE PASSWORD

EDIT CONFIG FILE

UPDATE FIRMWARE

UPDATE BOOTLOADER

See next page for details on these buttons



Set Password

Change the current device password

New Password

CANCEL OK

EDIT CONFIG FILE allows the advanced feature of editing the actual JSON config file. This is only recommended for expert users.

Choose file bootloader-v83.bin.enc

- ☒ Keep Existing Parameters
☐ Use New Parameters (Expert use only)

START

Choose file No file chosen

START

Status: Idle

If you are unable to update the firmware using this page, please manually enter DFU mode and reload this web page to update directly using the DFU interface

MANUALLY ENTER DFU MODE

MANUALLY EXIT DFU MODE

See Section 6.0 for manual DFU

Confirm

This action can permanently brick your device and should only be performed under FlexSCADA's direct supervision on devices that are not deployed

CANCEL CONTINUE



Update Successful

Confirm

This will reboot the device into DFU mode, reconnect and send the firmware file, relays may turn off or revert to programmed default states, are you sure you want to continue?

CANCEL START UPDATE

Status: Waiting for device to enter DFU mode

Status: Sending Firmware



Update Successful



Firmware Update Complete! Please allow up to a minute before it will be reachable again

1.9 - Ping Probes Page

Google.com (id: 0)

Label

Google.com

Ping Probe Label.

Description

Google Ping Test

IP Address

google.com

is unreachable for more than
Seconds

30

Perform Action

Cycle Relay

Relay

SW1

Ping this Host

Ping Timeout

- ☒ No Action
- ☐ Cycle Relay
- ☐ Turn Relay On

Perform an action if
destination is
unreachable

Select a relay to run
action on (optional).

Ping Watchdogs

Google.com (google.com)

12.00 ms REACHABLE 4 SECONDS AGO

Status of a probe as found on the dashboard.

1.10 - Network Page

☒ DHCP ☐ Static

When dynamic address mode is enabled, setting the address below will set the DHCP fallback address.

IP

192.168.1.20

Subnet

255.255.255.0

Gateway

192.168.1.1

Name Server 1

Name Server 2

IPv6

☒ SLAAC ☐ DHCPv6 ☐ STATIC

When dynamic address mode is enabled, setting the address below will set the fallback address.

Local Address

fe80::744

Global Address

2001:db8::743

Router

fe80::1

Prefix

2001:db8::

Prefix Length

64

Name Server 1

2001:4860:4860::8888

Name Server 2

2001:4860:4860::8844

If the network mode is set to DHCP, the device will request an IP from a DHCP server on the network. Should the Q5 fail to get an IP it will fall back to the IP configuration entered here. The same applies to IPv6. The FlexesQ5 supports both IPv4 and IPv6 at the same time.

Additionally, this page includes options for enabling and disabling SNMP, Modbus TCP and modifying the SSL Certificate.

ModBUS TCP

- ☐ Disabled
- ☐ Enabled (Read Only)
- ☒ Enabled (Read/Write)

SNMPv2

- ☐ Disabled
- ☒ Enabled (Read Only)

See Section 5.0 SNMP

2.0 - Analog Inputs

There are several types of inputs, each of which can be roughly categorized as Analog, Frequency, Pulse Counter and Alarm Contacts. This section provides greater detail on how to use and configure each of these input types.

Analog Voltage Reference

☒ 2.4V ☐ 4.0V

ADC Sample Rate
8 kSPS

These expert options should not be changed unless directed by FlexSCADA.

☒ Enable ☐ Enable/Disable this input.

Label

Bank #1 Volts

☐ Channel Name (displayed on dashboard).

Unit

Volts

☐ Units shown on dashboard.

Description

Battery voltage of bank #1

☐ Channel Description (optional).

Channel Mode

Voltage Mode (Measure AC / DC voltage up to $\pm 60V$, 0-5V / 0-10V sensors, Pulses/S)

Measurement Typ:

☒ Analog Value

- ☒ Analog Value
- ☐ Frequency
- ☐ Pulse Counter
- ☐ Alarm Contact


- Used for most applications with DC or AC.
- Eg. wind speed, RPMs, pulse inputs.
- Always up counting. Eg. total gallons.
- Eg. Door open, or water detected.

See section 2.4 for more details on measurement types.

☐ Extra Low Voltage Mode (Voltages below $\pm 2.4V$, 333mV AC Current transformers)

☒ Voltage Mode (Measure AC / DC voltage up to $\pm 60V$, 0-5V / 0-10V sensors, Pulses/S)

☐ Current Mode (Measure 4-20mA / 0-20mA sensors, 50mA output AC Current Transformers)

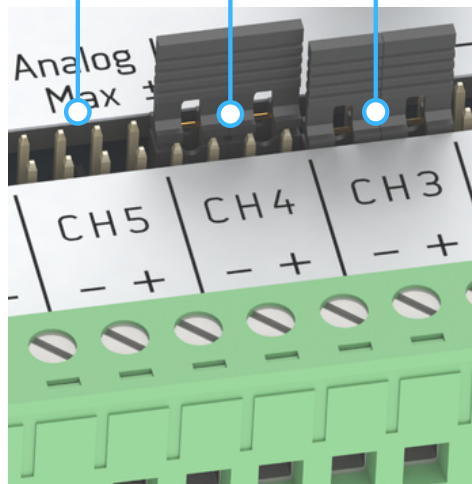

The Q5 hardware has been designed to accept a wide range of inputs. To insure proper operation, it is important to select the correct *Channel Mode* and corresponding hardware configuration.

Voltage Mode accepts a wide voltage range ($\pm 60V$ AC/DC) and can be used for a number of functions (alarm contacts, battery voltages, 0-5V sensors, AC Power Metrics, etc). See sec 2.1 for examples

Current Mode is used for current based sensors, such as 4-20mA sensors and current transformers. See sec 2.2 for examples.

Extra low Voltage Mode is used where high accuracy in a very low voltage range is required. The max voltage range for this mode is $\pm 2.4V$ AC/DC.

When changing between input *Channel Modes*, you will be alerted about a required hardware change to the jumpers on the Q5. When making this change the Q5 must be powered down.

Physical Reconfiguration Required

Analog Input Mode Changed, The jumpers for this channel must be reconfigured for proper operation.

FAILURE TO MAKE THIS HARDWARE CONFIGURATION CHANGE BEFORE CONNECTING YOUR INPUT MAY DAMAGE YOUR DEVICE AND VOID YOUR WARRANTY!

In the *Logging / Dashboard* section, you must enable the metrics you wish to be visible on the dashboard or sent to the cloud for graphing. Some items may be grayed out, depending on the input configuration chosen. For example, the State metric is only valid when the *Measurement Type* is set to Alarm Contact. For min, max and average time period see Section 1.8 - Measurement Interval.




Logging / Dashboard

- ☐ Instantaneous
- ☒ Average
- ☐ Minimum
- ☐ Maximum
- ☐ Ripple
- ☐ State

2.1 - Voltage Input

Below is an example of a typical 0-10V sensor attached and configured for use with the Q5. When installing, first confirm that the Q5 is configured in Voltage Mode (see section 2.0 for details on voltage mode). Next, attach the analog output from your sensor to the + terminal on the Q5 channel (shown in the diagram below).

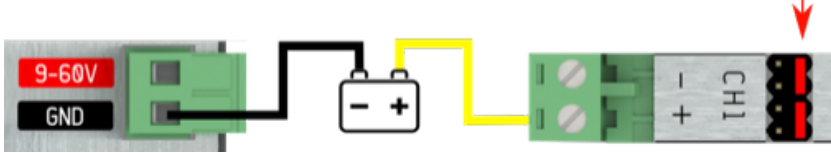

Navigate to the *Analog Inputs* menu, select the channel, then select *Voltage Mode* under *Channel Mode*. Next select *Analog Value* under the *Measurement Type* drop down (Channel Mode and Measurement Type are highlighted in the blue box).

Voltage Mode (Measure AC / DC voltage up to $\pm 60V$, 0-5V / 0-10V s ▾ Analog Value

Multiplier

0.00001856088638305664

Offset

0

Input Scaling

Voltage from sensor at Zero Output

0

Volts

Voltage from sensor at Full Scale Output

10

Volts

Reading from sensor at Zero

0


Reading from sensor at Full Scale

100

Set the sensor range using the specs found on the side of the sensor or in the provided data sheet. In the above example, 0V corresponds to 0 PSI and 10V corresponds to 100 PSI. Enter the voltage output range of the sensor's analog output in the green box. If the sensor output was a 0-5V signal level, the values in the green box would be 0 and 5 instead of 0 and 10.

The *Multiplier*, *Offset* and *Gain* are automatically set when using the *Input Scaling* section.

For higher voltages (up to 300V) the Q5 Voltage Reducer hardware module may be used with the following configuration. For more details on AC power, refer to section 2.5.

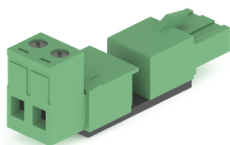

Q5 Voltage Reducer Module (for voltages up to 300V RMS).

Voltage from sensor at Zero Output

0

Volts

Voltage from sensor at Full Scale ...

60

Volts

Reading from sensor at Zero


0

Reading from sensor at Full Scale

1213.142

Input Scaling for Q5 Voltage Reducer Module

Scaling: $60V = 1213.142v$

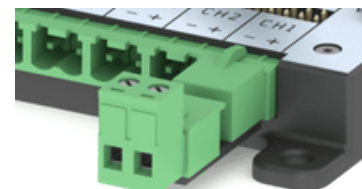


Q5 Voltage Reducer Module (installed).

Current Sensors

Current sensors (not to be confused with current transformers) take a current signal and convert it to an analog voltage output. FlexSCADA and its resellers can provide a 100 A non-invasive current sensor which can be configured as shown below.

Scale Ratio

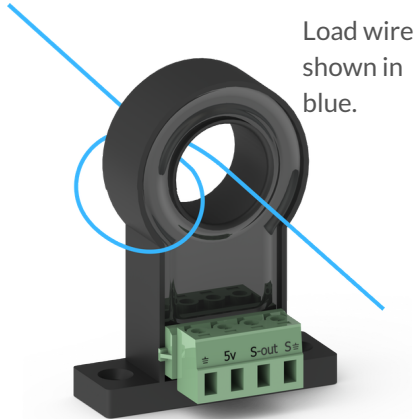

To double the accuracy and halve the range the load wire can be looped through the sensor a second time. In the above example, the new max range is ± 50 A.

Reading from sensor at Zero


0

Reading from sensor at Full Scale

50


Input Scaling with two loops.

The load wire can be looped through the sensor as many times as needed to get the desired scale. Only the **Full Scale** field is modified to reflect this ratio change.

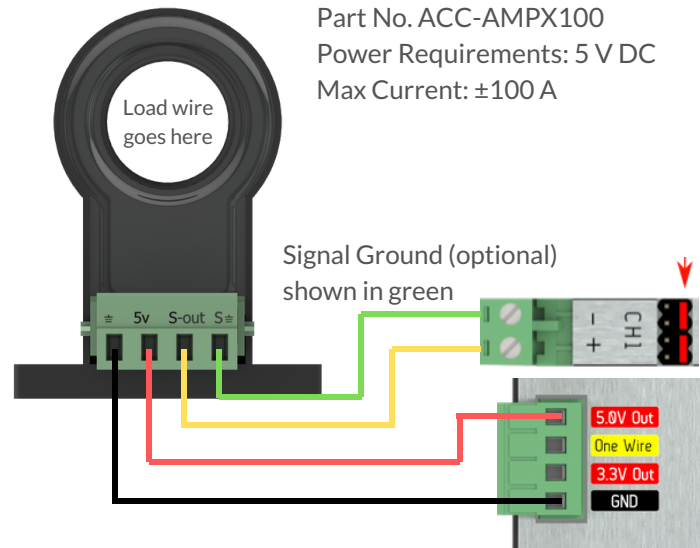

Input Scaling

Voltage from sensor at Zero Output	Volts	Reading from sensor at Zero
2.4984		0
Voltage from sensor at Full Scale Output	Volts	Reading from sensor at Full Scale
4.0864		100 1:1 ratio

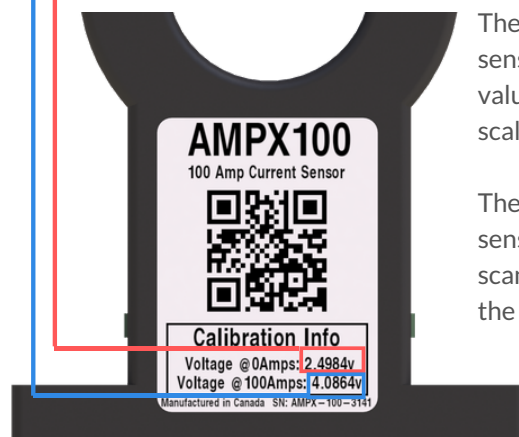

The back of the current sensor contains the values required for input scaling on the FlexsQ5.

The QR code on the sensor can also be scanned to download the calibration report.

2.2 - Current Inputs

The 4 - 20 mA sensor is the de facto industry standard. This section details how to configure the Q5 to accept this type of input. As the Q5 does not power current loops, external power will need to be provided in order for your current loop to function.


To utilize this feature the hardware jumpers must be configured in *Current Mode* (see section 2.0). Next, configure the input from the *Analog Inputs* menu. The Channel Mode and Measurement Type must be configured as shown below. The configuration example below shows a 4 - 20 mA sensor with a range of 0 - 150 PSI. The sensor range for the specific sensor must be entered as shown in the red boxes.

WARNING! EXCEEDING THE CURRENT RATINGS OF THE Q5 WILL DAMAGE YOUR DEVICE AND VOID THE WARRANTY!


Channel Mode	Measurement Type
Current Mode (Measure 4-20MA / 0-20I	▼ Analog Value
Multiplier	Offset
0.000027939677238464352	-37.5

Input Scaling?

Current from sensor at Zero Output	Reading from sensor at Zero
4 mA	0
Current from sensor at Full Scale ...	Reading from sensor at Full Scale
20 mA	150

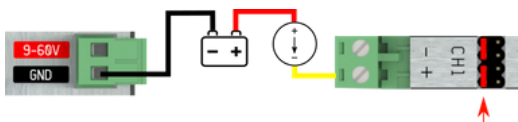


Hardware configuration example for a 4 - 20 mA sensor.

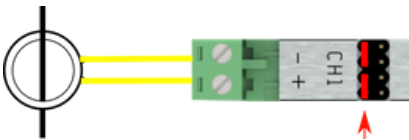


Current transformers can also be used with the Q5 without the need for additional conditioning. Current transformers are connected as shown above.

Note: Current transformers are not to be confused with the 100A non-invasive current sensors sold by FlexSCADA. The non-invasive current sensor converts current readings into a 0-5V voltage style reading. See sec 2.1

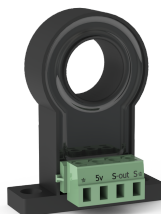

2.3 - 1-Wire Sensors

The Q5 supports 1-wire sensors. The below diagram shows how to connect and provide a 1-wire sensor with power and data communication. The Q5 supports up to 64 sensors, each sharing the same 3 wires.

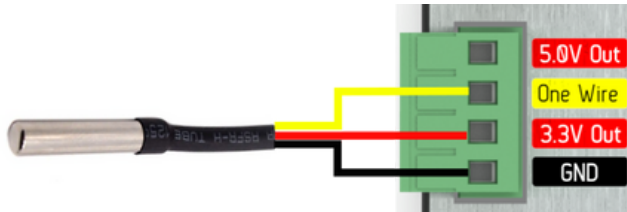


To attach additional one-wire sensors a standard wiring bus will be required, as the terminals are not physically capable of holding more than a few sensors.


Each one-wire sensor has a unique digital ID that makes it possible to view its value without interfering with the other sensors.

Once the sensors have been connected, they must be configured. In the web interface, navigate to the *Temperature Sensors* menu. Located at the bottom of the page you will see "1 unconfigured sensors found on this device" followed by the unconfigured sensor showing an ADD button (any one-wire sensor can be used in this way).

Alternately, it is possible to pre-add the sensors using the ID found on the sensors sold by FlexSCADA and its resellers. All one-wire sensors will have a unique ID. FlexSCADA one-wire sensors have been labeled with this pre-existing ID for ease of use.

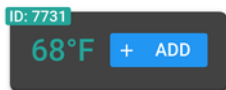

Adopt unconfigured temp sensor.

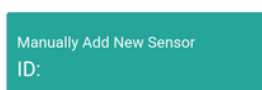


Manually add temp sensor. (Sensor ID found on sensor wire shown right.)



Unit System
Imperial

The display units can be modified in the *Device Options* menu.

The below example shows a newly added temp sensor, along with the options to name the sensor and choose which metrics to log or add to the dashboard.

 Indoor Temp Temperature (id: 7731)


ID

7731

Label

Indoor Temp

Description

 Logging / Dashboard

☐ Instantaneous

☒ Average

☐ Minimum

☐ Maximum

Select which metrics you want to log

Tags

DELETE

Show/Hide sensor options.

ID of the sensor, this can be updated if a sensor needs to be replaced.

Sensor Label - this label is used on the dashboard and in the graphing.

Detailed sensor description. (optional)

Select what metrics you wish to graph or display on the dashboard. For min, max and average time period see Section 1.8 - Measurement Interval.

Tags help in selecting datasets when graphing. An example might be "greenhouse 1" allowing an easy way to select sensors belonging to that greenhouse.

Delete this sensor.

Indoor Temp

64.74°F AVG

New temp sensor displayed on the dashboard.

2.4 - Understanding Measurement Types

Not all measurements utilize an analog value. This section details the various *Measurement Types* supported by the Q5.

Each channel provides the following *Measurement Type's* option:

☒ Analog Value

☐ Frequency

☐ Pulse Counter

☐ Alarm Contact

Input Scaling

Voltage from sensor at Zero Output	Volts	Reading from sensor at Zero
0		0
Voltage from sensor at Full Scale O...	Volts	Reading from sensor at Full Scale
10		100
Gain	Multiplier	Offset
4X (Max ±15.57V)	0.000018560886	0

Pulse Multiplier

Pulse Detection Threshold

Volts

Alarm Detection Threshold

Volts

☒ Invert State

☒ Force Immediate Upload on Change

Threshold over or under which to trigger alarm.

Alarm under threshold.

Send update to cloud when alarm is triggered.

For additional information on the Analog Value option and Input Scaling calculator refer to sections 2.1 and 2.2.

Both *Frequency* and *Pulse Counter* require a threshold to recognize when a valid signal has been detected. This is known as the *Pulse Detection Threshold*. To avoid counting the same rising edge twice, the signal must exceed 20% of the *Pulse Detection Threshold* in order to be considered a valid pulse (see graphic below).

Frequency is the number of valid pulses per second or hertz (Hz). Alternately, *Power Metrics* can be used to find the frequency of an input (see section 2.5 for more information). *Pulse Counter* is a total count of all pulses since the Q5 has booted.

Pulse Multiplier is used to adjust sensor readouts. For example, the spec sheet for an anemometer reads as follows: **Output Frequency: 1,1 HZ / m/s**. But we want the sensor to read out the exact m/s on our graphs. The multiplier could be set to $1 / 1.1 = 0.909$ multiplier.

In another example a flow sensor reads **450 output pulses/liter**. The multiplier could adjust the output to read in liters/minute. We are looking at Hz (pulses per second) so we need to divide by 60 seconds. $450 / 60 = 1$ liter per 7.5 pules/s = 1 (liter) / 7.5 (pulses) = **0.133333 multiplier**.

2.5 - Power Metrics

The *Power Metrics* menu provides the ability to calculate a number of power related metrics for both DC and AC power. With AC power it is possible to calculate watts, amps, volts, power factor, apparent power, frequency and Total Harmonic Distortion (THD). With DC the main use for power metrics is for calculating wattage.

Label **AC Line** Metric Label **AC Line**

Description Detailed sensor description (optional).

Voltage Source **Line Voltage (Volts)** Current Source **Line Amps (Amps)** See sec 2.0 for more details on source channels.

Calculation Mode **AC Mode** Select AC or DC mode

Min Frequency **30** Hz

Max Frequency **70** Hz

Voltage Threshold **5** V

789.03 W

POWER AVG

amperage avg 4.363 A
apparent power 893.105 W
freq 56.196 Hz
power factor 0.883 PF
voltage avg 204.702 V

Power Metrics as displayed on the dashboard.

Expert options for AC metrics.



Logging / Dashboard

☐ Inst Power (Watts, Real)

☒ Avg Power (Watts, Real) Calculated Real Power

☐ Min Power (Watts, Real)

☐ Max Power (Watts, Real)

☐ Avg Apparent Power (W)

☒ Avg Power Factor (PF) Ratio of Real Power to Apparent Power

☐ Inst Voltage (Vrms)

☒ Avg Voltage (Vrms) Calculated Voltage

☐ Min Voltage (Vrms)

☐ Max Voltage (Vrms)

☐ Inst Voltage THD (%)

☐ Avg Voltage THD (%) Total Harmonic Distortion

☐ Inst Amperage (Lrms)

☒ Avg Amperage (Lrms) Calculated Amperage

☐ Min Amperage (Lrms)


☐ Max Amperage (Lrms)

☒ Line Frequency (Hz) Calculated AC Frequency

Instantaneous, Average, Minimum and Maximum can be selected for graphing or logging of each available metric. For min, max and average time period see Section 1.8 - Measurement Interval.

3.0 - Relay Configuration

Both the Q5 and Q5 Pro include 8 solid state load relays capable of switching up to 10A DC (Max 100W). The pro version includes internal current sensing on all 8 relays capable of accurately measuring loads up to 5 Amps DC.

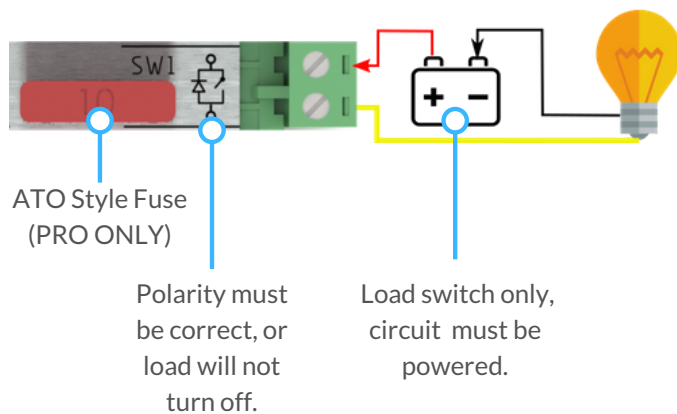

Label Load Name

Description

Default state after powerup ☒ Default state after Q5 is rebooted

Digital Fusing Fuse Speed Automatic Reset

Load Voltage Monitoring ☒

Low Voltage Dis...	Threshold	Speed	Automatic Reset
Enabled	10.5	Very Fast (No)	60 Seconds
High Voltage Dis...	16	Very Fast (No)	60 Seconds

☐ Force Immediate Upload on Fuse Blow or HVD/LVD Disconnect

Logging / Dashboard

- ☒ Switch State (On / Off)
- ☒ Digital Fuse State (Normal / Blown)
- ☒ LVD State (Normal / Disconnected)
- ☒ HVD State (Normal / Disconnected)
- ☒ Load Amperage (Amps)
- ☒ Load Power (Watts)

Toggle State

Toggle State for 10 seconds ☐

Reset Low/High Voltage Disconnect or Digital Fusing (PRO ONLY) ☐

Load Current (PRO ONLY)

amperage

1.10 W

power

Load Relay as found on the dashboard


Digital Fusing (PRO ONLY)

Load Voltage is required to calculate wattage (PRO ONLY).

Eg Battery voltage powering this device, required for Low/High Voltage Disconnect.

Low and High Voltage Disconnect serve the same purpose; protecting the load from damage in the event of extreme power fluctuations.


Choose the metrics to be logged or displayed on the dashboard. LVD, HVD and Load Power require Load Voltage to be provided. Load Amperage, Load Power and Digital Fusing are available with the Q5 Pro only.

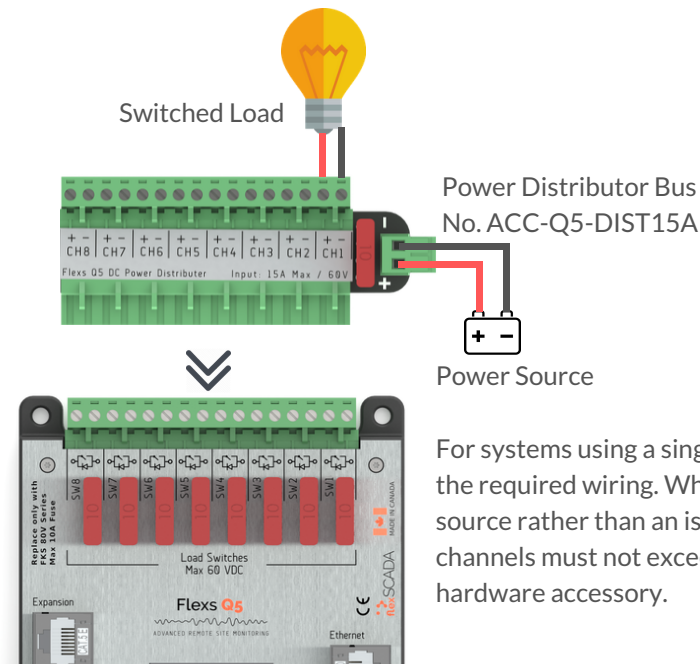

For systems using a single voltage we offer a distribution bus to cut down on the required wiring. When using the distributor each channel acts as a power source rather than an isolated switch. The max combined load across all channels must not exceed 15 A. No software configuration is required for this hardware accessory.

3.1 - Relay Specifications

The Q5 Relays are subject to environmental de-rating as detailed below.

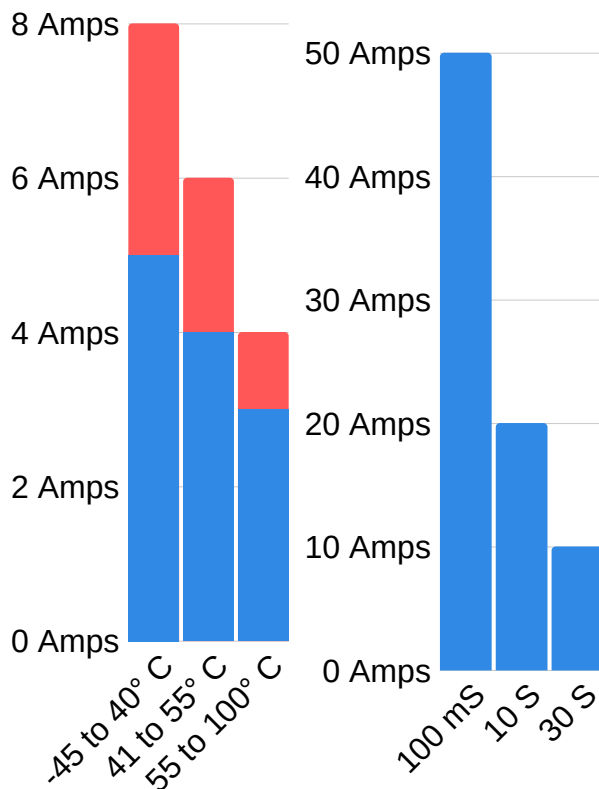

Red - under 30 Volts.
Blue - 30 to 60 Volts.

Max on time in 1 minutes period.

Technical Specifications

- Switch Impedance: 8 mOhms (Not including fuse)
- Max Open Voltage: 70 VDC
- Power Consumption: 2 mW in closed state
- Isolation Level: +/- 125 V (Channel to Channel or Channel to Q5 Ground)
- Max Surge Rating: 250 A transient pulsed; $t_p \leq 10 \mu s$
- Max Current Sensing: 5 A (PRO ONLY)
- Contains fly-back suppression for switching inductive loads such as relays, motors, etc.(up to 140 mJ (Max 250 A Peak Current))

4.0 - Scripting

The FlexsQ5 has an on-board scripting language that utilizes JavaScript syntax. This scripting provides access to all on-board analog inputs, temperature sensors, load outputs, custom feeds and Modbus TCP.

Custom feeds are a location where you can store data generated by your scripts. This data is uploaded to the cloud server and can also be viewed on the dashboard. Additionally you can access custom feeds from SNMP. See section 5.0.

Custom feeds can be configured as either a bool (true or false) or as a floating point number (a number with decimal places). See the on board "Custom Feeds" example for more info on how to write to the custom feeds.

The screenshot shows the configuration page for a custom feed named "Battery Charge % (id: 0)". It includes fields for Label, Data Type (set to "Value: (32 Bit Floating Point Number)"), and Description. A red "DELETE" button is at the bottom. To the right, a preview shows the feed's status on a dashboard as "0" with a green "VALUE" label. Annotations with blue circles and lines point to the "Label", "Data Type", "DELETE" button, and a green "ADD CUSTOM FEED" button at the bottom left.

Custom Feed Label

State: (1 Bit Boolean, True or False)
Value: (32 Bit Floating Point Number)

Delete this custom feed.
Warning: Deleting a feed will increment all other feeds requiring change to the scripting.

ADD CUSTOM FEED

Add a new custom feed.

Status of custom feed as displayed on the dashboard.

Logic menu is where all the action with scripting takes place. Included on this page are a number of helpful examples (highlighted in blue). Below you will find the syntax highlighted code editor (highlighted in red).

The screenshot shows the "Logic" menu with various categories like "HIDE EXAMPLE CODE", "SCRIPTING BASICS", "TOGGING A RELAY", etc. Below the menu is a code editor with syntax-highlighted JavaScript code for a relay toggling example. The code editor is highlighted with a red border.

```
1 // Example code
2
3 /*
4 This example demonstrates simple relay toggling.
5 */
6
7 let run = ffi('bool run(void)'); // import run function
8 let waitMS = ffi('void waitMS(int)'); // import waitMS function
9
10 // import setRelay function
11 let setRelay = ffi('void *setRelay(int,bool)');
12
13 // binding the loop to the run() function allows
14 // the Flexs Q5 to stop the script during configuration
15 // updates, prevents unexpected behaviour
16 while(run()){
17
18   setRelay(1,true); // Turn relay 1 on
19   waitMS(1000); // wait 1 second (1000ms)
20   setRelay(1,false); // Turn relay 1 off
21   waitMS(1000); // wait 1 second (1000ms)
22
23 }
24
```

All scripting is managed as a secondary priority to the main functions of the Q5 (to avoid interruptions to system tasks). For a more in-depth look at scripting, please see the on board examples.

Any errors in the scripting will prevent all of the script from functioning. Details on where the error is located can be seen at the top of the page upon saving the settings.

A red error box with a white triangle icon. The text inside reads: "Logic Error: Execution Error (2) REFERENCE_ERROR near line 2 Logic Script Not Running". A blue line points from the text "The line in your script causing the error." to the error message.

Logic Error: Execution Error (2)
REFERENCE_ERROR near line 2
Logic Script Not Running

The line in your script causing the error.

Error shown at top of page, indicating the line causing the problem.

```

{
  "inputs": [
    {
      "ch": 1,
      "label": "Main Battery",
      "unit": "V",
      "value": {
        "inst": 49.142,
        "avg": 48.992,
        "min": 47.501,
        "max": 49.50,
        "ripple": 0.0021,
        "state": 0
      }
    }
  ],
  "relays": [
    {
      "ch": 1,
      "label": "Main Microwave",
      "state": 0,
      "load_avg": -0.0009,
      "load_inst": -0.0118,
      "power_avg": 0,
      "hvd_tripped": 0,
      "lvd_tripped": 1,
      "fuse_tripped": 0
    }
  ],
  "temp_sensors": [
    {
      "id": 7731,
      "index": 0,
      "label": "Indoor Temp",
      "registered": true,
      "value_inst": 0,
      "value_avg": 0
    }
  ],
  "power_metrics": [
    {
      "id": 0,
      "label": "AC Line",
      "voltage": {
        "avg": 2.6372,
        "max": 2.6423,
        "min": 2.6319
      },
      "amperage": {
        "avg": 3.023,
        "max": 3.1572,
        "min": 2.9257
      },
      "real_power": {
        "avg": -7.0377,
        "max": -6.7507,
        "min": -7.4345
      },
      "powerfactor": -0.8828,
      "apparent_power": 7.9723,
      "thd": 30.641
    }
  ],
  "epoch": 1548106981
}

```

4.1 - HTTP API

The FlexsQ5 has a HTTP/HTTPS API that allows for a number of parameters to be accessed or modified. Below are some examples of how to use this API.

All requests must be authenticated using the BASIC AUTH headers with the password hashed using SHA256.

```

1  <?php
2
3  //Change the following variables as needed
4  $ip = '192.168.1.20';
5  $password = 'flexscada';
6
7  //Initialize CURL
8  $curl = curl_init();
9
10 //Set CURL Options
11 curl_setopt_array($curl, array(
12     CURLOPT_URL =>
13     "http://$ip/api/metrics", // /metrics or /crypto
14     CURLOPT_RETURNTRANSFER => true,
15     CURLOPT_TIMEOUT => 2,
16     CURLOPT_CUSTOMREQUEST => "GET",
17     CURLOPT_USERPWD =>
18     ":" . hash('sha256', $password . "FlexsQ5!")
19 ));
20
21 //Run CURL Request
22 $response = curl_exec($curl);
23 $err = curl_error($curl);
24
25 curl_close($curl);
26
27 //if no error was found
28 if (!$err) {
29     //Decode the JSON Response
30     $returnedData = json_decode($response, true);
31     //Return the decoded data
32     print_r($returnedData);
33 } else {
34     // If there was an error, show that
35     echo "cURL Error #:" . $err;
36 }
37

```

This PHP example requests all the metrics from the FlexsQ5. The response shown left includes all enabled channels and relays. The /crypto endpoint displays IP Address info and other system parameters.

The above example code can be downloaded here:
<https://pastebin.com/y66r1niS>

```

1  <?php
2
3  //Change the following variables as needed
4  $ip = '192.168.1.20';
5  $password = 'flexscada';
6
7  //Initialize CURL
8  $curl = curl_init();
9  //Valid Commands
10 //set_relay = set relay state
11 //reset_relay = reset softfuse, LVD or HVD
12 //pulse_relay = toggle relay for 10 sec
13 //toggle_relay = change relay state
14 $postData['command'] = 'set_relay'; //valid command
15 $postData['channel'] = 1; //Relay Channel Number
16 //Only valid on set_relay command
17 $postData['state'] = 1; // 0 = OFF; 1 = ON
18
19 //Set CURL Options
20 curl_setopt_array($curl, array(
21     CURLOPT_URL =>
22     "http://$ip/api/ctrl",
23     CURLOPT_RETURNTRANSFER => true,
24     CURLOPT_TIMEOUT => 2,
25     CURLOPT_CUSTOMREQUEST => "POST",
26     CURLOPT_POSTFIELDS => json_encode($postData),
27     CURLOPT_USERPWD =>
28     ":" . hash('sha256', $password . "FlexsQ5!")
29 ));
30
31 //Run CURL Request
32 $response = curl_exec($curl);
33 $err = curl_error($curl);
34
35 curl_close($curl);
36
37 //if no error was found
38 if (!$err) {
39     //Decode the JSON Response
40     $returnedData = json_decode($response, true);
41     //Return the decoded data
42     print_r($returnedData);
43 } else {
44     // If there was an error, show that
45     echo "cURL Error #:" . $err;
46 }

```

This PHP example shows how to set a relay state on the flexsQ5.

```

1  {
2      "status": "success"
3  }

```

The Q5 will respond with the above reply indicating that the state change was successful.

Using this same API endpoint it is also possible to reset the soft fuse, toggle the relay and toggle the relay for a timed 10 seconds.

The example shown left can be downloaded here:
<https://pastebin.com/fsvaPpP4>


In this manual we have only shown examples written in PHP, however the Q5 API can be accessed from any code language using the correct HTTP requests.

5.0 - SNMP

Simple Network Management Protocol (SNMP) has been used by networks for over 30 years, making it one of the most widely supported protocols.

The Q5 supports SNMP version 1 and 2c, with the default community of "public". At this time, the community can not be changed to encourage better security methods such as a VPN.

Enable SNMP in the *Networking* menu as shown.

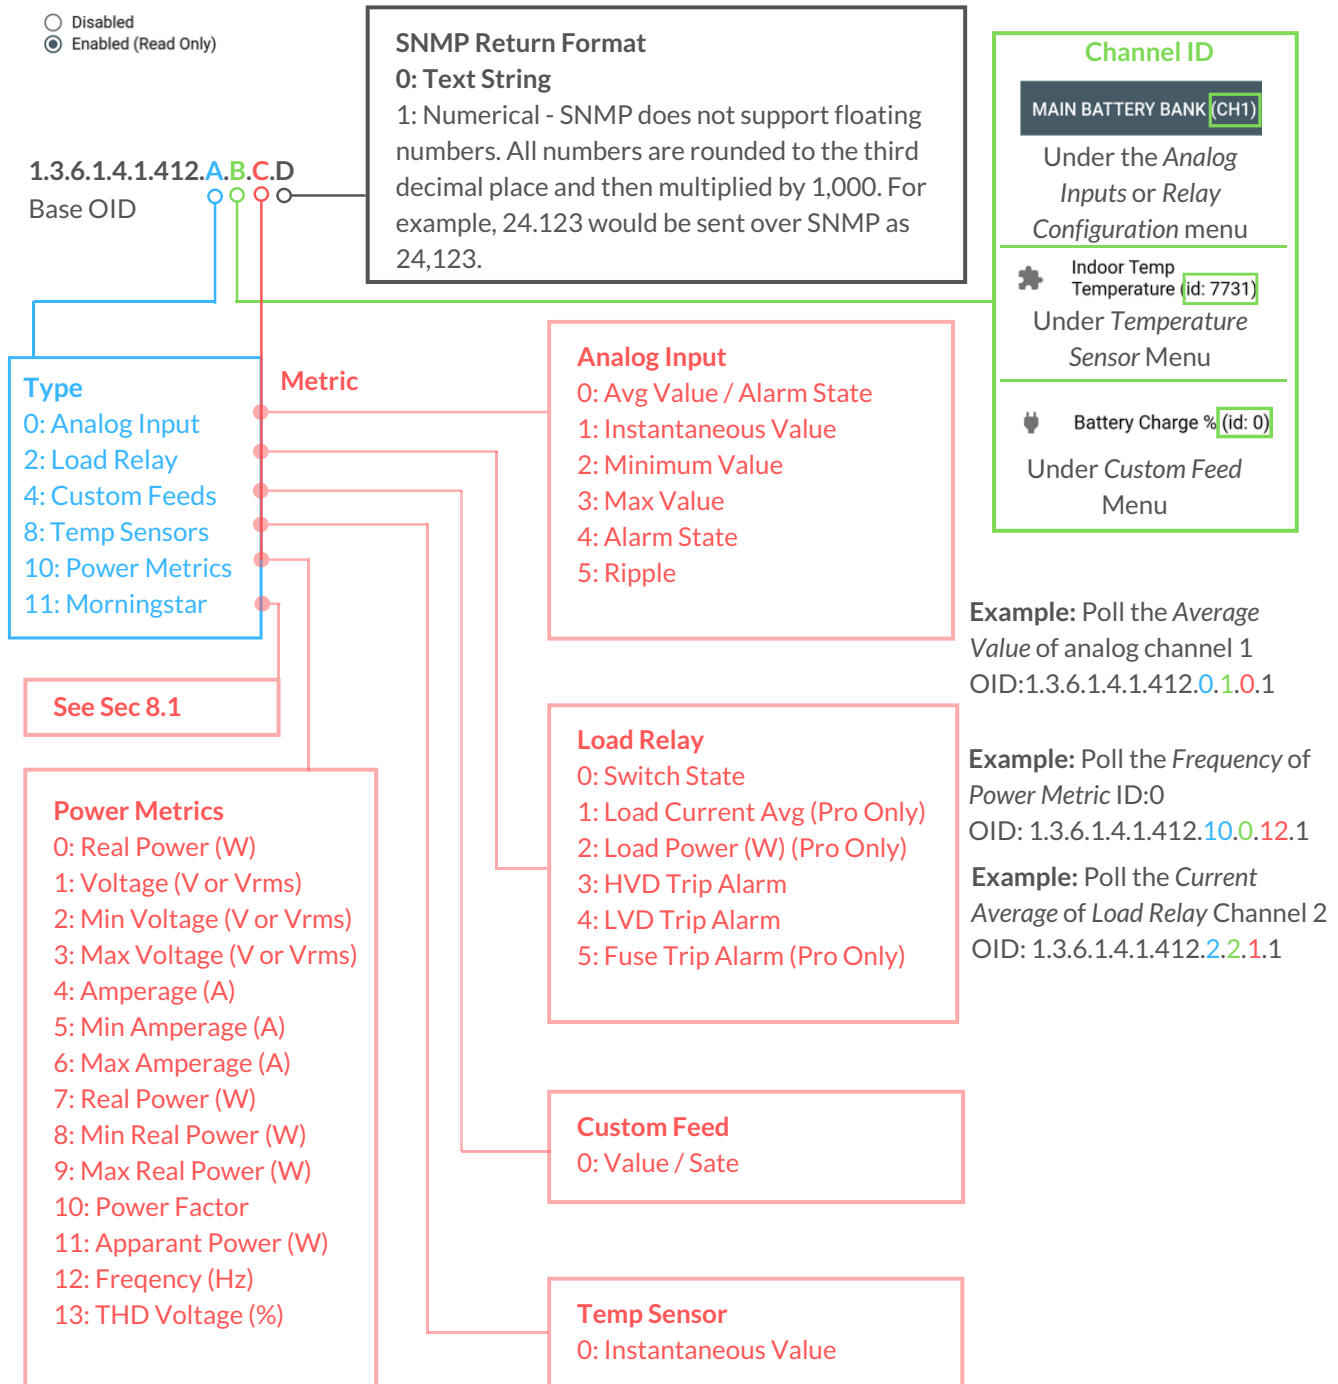

Example: Poll the average value of *channel 1* using the *NetSNMP* command line tool.

```
# snmpget -v2c -c public <IP Address> 1.3.6.1.4.1.412.0.1.0.1
```

5.1 - MODBUS TCP

MODBUS TCP is used by a variety of industrial applications involving PLC's and HMI's, currently the Q5 only supports MODBUS over TCP. If MODBUS via RS485 is required a third-party converter will be required. MODBUS devices can assume two roles: Slave and Master. On the Q5 the Slave role can be enabled under the Networking Menu as shown below. All Master related functionality can be accessed through custom scripting.

ModBUS TCP

- ☐ Disabled
- ☐ Enabled (Read Only)
- ☒ Enabled (Read/Write)

Relay Outputs - Read/Write - Coil

Reg 101 - Relay 1

.....

Reg 108 - Relay 8

Read all relay states: modpoll.exe -0 -m tcp -t 1 -r 101 -c 8 -1 <IP Address>

Analog Inputs - Read - 32b Float

Reg 30000+30001 - Input 1 (Average)

.....

Reg 30014+30015 - Input 8 (Average)

Read all input values: modpoll.exe -0 -m tcp -t 4:float -r 30000 -c 8 -1 <IP Address>

Custom Feed Boolean/State - Read/Write - Coil

Reg 300 - Custom Feed ID:0

Reg 301 - Custom Feed ID:1

....

Read custom feed state: modpoll.exe -0 -m tcp -t 1 -r 300 -c 1 -1 <IP Address>

Custom Feed - Read/Write - 32b Float

Reg 400+401 - Custom Feed ID:0

Reg 402+403 - Custom Feed ID:1

....

Read custom feed value: modpoll.exe -0 -m tcp -t 4:float -r 400 -c 1 -1 <IP Address>

6.0 - Device Firmware Updater

FlexSCADA will occasionally release new firmware to add additional functionality to the Q5. This section explains how the Manual Device Firmware Updater (DFU) works, note that under normal circumstances this can be done as shown in section 1.8 without using the manual mode.

Select *Device Options* from the main menu. On the *Device Options Page*, you will find the *Update Firmware* Button.

The diagram illustrates the DFU process. It starts with the 'UPDATE FIRMWARE' button in the main menu. This leads to a page with a 'Choose file' button, a 'No file chosen' status, and a green 'START' button. Below this is a 'Status: Idle' indicator and a note to see Section 1.8. A warning message states: 'If you are unable to update the firmware using this page, please manually enter DFU mode and reload this web page to update directly using the DFU interface'. At the bottom of this page are 'MANUALLY ENTER DFU MODE' and 'MANUALLY EXIT DFU MODE' buttons. A callout box explains: 'After selecting and starting the upload do not unplug or refresh the page for 30 seconds.' Clicking 'MANUALLY ENTER DFU MODE' leads to a 'Confirm' dialog asking if the user wants to reboot into DFU mode. Clicking 'ENTER DFU' leads to the 'Boot OS / Exit DFU' page. This page shows the upload progress, system information (UID, MAC Address), IPv4 configuration (Address, Subnet Mask, Default Gateway, DNS), and IPv6 configuration (Link-Local Addr, Global Address, Prefix, Router, DNS). A callout box explains: 'After refreshing the page, you should be in DFU mode (shown at right). You have 5 minutes to find and upload your firmware before the Q5 will revert back to the main operating system. You can also exit the DFU mode by clicking the link marked "Exit DFU". The UID, MAC and current IP configuration are also visible from the DFU mode.'

UPDATE FIRMWARE

Choose file No file chosen **START**

Status: Idle See Section 1.8 for using this feature

If you are unable to update the firmware using this page, please manually enter DFU mode and reload this web page to update directly using the DFU interface

MANUALLY ENTER DFU MODE **MANUALLY EXIT DFU MODE**

After selecting and starting the upload do not unplug or refresh the page for 30 seconds.

Confirm

This will reboot the device into DFU mode, relays will revert to programmed default states, are you sure you want to continue?

CANCEL **ENTER DFU**

After refreshing the page, you should be in DFU mode (shown at right). You have 5 minutes to find and upload your firmware before the Q5 will revert back to the main operating system. You can also exit the DFU mode by clicking the link marked "Exit DFU". The UID, MAC and current IP configuration are also visible from the DFU mode.

Boot OS / Exit DFU

Upload new firmware Choose file No file chosen

Exiting DFU mode in 281 seconds

System Information

UID	1429491896
MAC Address	50-37-E8-07-07-0B


IPv4 Configuration

IPv4 Address	162.216.185.248
Subnet Mask	255.255.255.240
Default Gateway	162.216.185.241
Primary DNS	162.216.185.241
Secondary DNS	0.0.0.0

IPv6 Configuration

Link-Local Addr	::
Global Address	::
Prefix	::/0
Router	fe80::1
Primary DNS	::

It is also possible to manually force the device into DFU mode by holding the control knob down while power is applied to the device. This is also mentioned in Section 7.0.

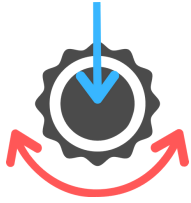

Rotating goes between pages, clicking accesses additional views.

7.0 - Device Interface

Using the multi-function knob on the Q5, it is possible to view a number of parameters without using the web interface. The knob can be rotated and pressed to navigate between pages or access additional views. In the case of relays, clicking the knob allows you to change the state of the relay. The naming and scaling of each view found below corresponds to what has been configured in the web interface.

Pressing the knob while the power is applied will put the device in DFU mode - See Section 6.0. Continuing to hold the knob for an additional 60 seconds will reset the configuration to factory default.

Flexs Q5

LTE: N/A
ETH: 162.216.185.248
UID: 1429491896
TX Buf: 9/1617
1523 Bytes

Q5 Homes Page - showing current IP, device UID, available buffer for readings and Bytes of readings taken.

ETHERNET (DHCP)

IP: 162.216.185.248
GW: 162.216.185.241
NM: 255.255.255.240
NS: 162.216.185.241
50-37-E8-07-07-0B

Ethernet Page - Shows current IP, Gateway, Netmask, Name Server and MAC Address.

Line Voltage

-0.8839



Analog Input Page - See Section 2.0. There will be one page for each enabled analog input. Press the knob to switch between views.

Line Voltage

INS: 3.266 Volts
AVG: 0.037 Volts
MIN: -4.189 Volts
MAX: 4.227 Volts
RIPPLE: 8.416 Volts

SWB

ON Press to toggle

SWB

OFF Press to toggle

Load Relay Page - Press the knob to switch relay ON/OFF. See Section 3.0 for more info on naming relay channels.

Indoor Temp

0.00 F

One Wire Sensors Page - See Section 2.3 for more details.

AC Line

REAL POWER: -7.32W
APPAR POWER: 8.94W
POWER FACTOR: -0.82
AMPERAGE: 2.97Arms
VOLTAGE: 3.01Vrms

Power Metrics Page - See Section 2.5 for more details.

Uptime (Seconds)

0.0000

Custom Feed Page - See Section 4.0 for more details.

Google.com

google.com
Latency: 61.00 Ms
Last Success: 0s ago


Ping Page - See Section 1.9 for more details.

8.0 - Expansion Interfaces

This section details how some of the expansion interfaces on the Q5 can be used.

RJ45 Expansion Connector

WARNING! CONNECTING A POE TO THIS PLUG WILL DAMAGE YOUR Q5 AND VOID YOUR WARRANTY!

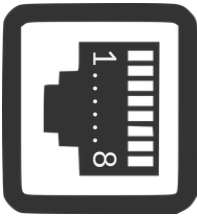


Expansion

Expansion Pinout

- 1..... I2C-SCL / UART-TX (I/O)
- 2..... I2C-SDA / UART-RX (I/O)
- 3..... 3.3V DC OUT (500 mA Max)
- 4..... GND
- 5..... 5V DC OUT (500 mA Max)
- 6..... IO Push/Pull 1.8 V / 5 V Open Drain Out
- 7..... GND
- 8..... One-Wire (I/O)

Note: The I2C, UART and IO pins are not accessible via the Q5 software at this time. Customers that need access to one of these interfaces should contact FlexSCADA.

Memory Expansion

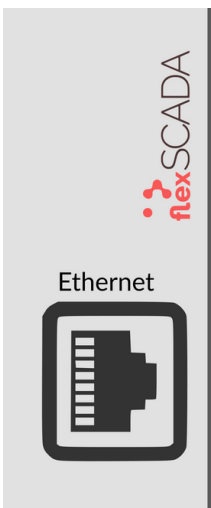

Insert Memory Card



The Q5's internal memory allows for roughly 1 month* of readings to be stored before older data is erased. In applications where extensive long term data-logging is required the Q5 may be outfitted with an external memory card for additional capacity. For more info on how to use this feature please contact FlexSCADA.

*Actual duration depends on measurement interval and number of metrics being logged.


The time field is UNIX Timestamp. Each metric enabled will be included in the CSV. A valid NTP must be provided to have valid time data.

	A	B	C	D
1	timestamp	SW1.state	Channel 1.avg	Channel 1.inst
2	1558122824	0	0.0013	-0.0007
3	1558122834	0	0.0013	0.0053
4	1558122844	0	0.0013	0.0055
5	1558122854	0	0.0013	0.0053
6	1558122864	0	0.0013	0.0032
7				

Left hand side menu shows the memory card

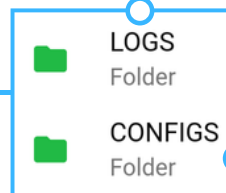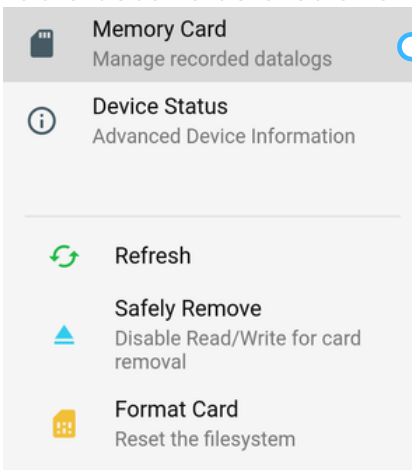

Each time the configuration is changed a new CSV file will be created along with a new JSON cfg file.

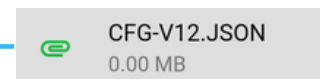


If enabled, both measurement logs and config files will be stored in the above folders.

8.1 - Morningstar Plugin

This section details how to use the Morning Star plugin to access data from the charge controller

Physical Connection Options

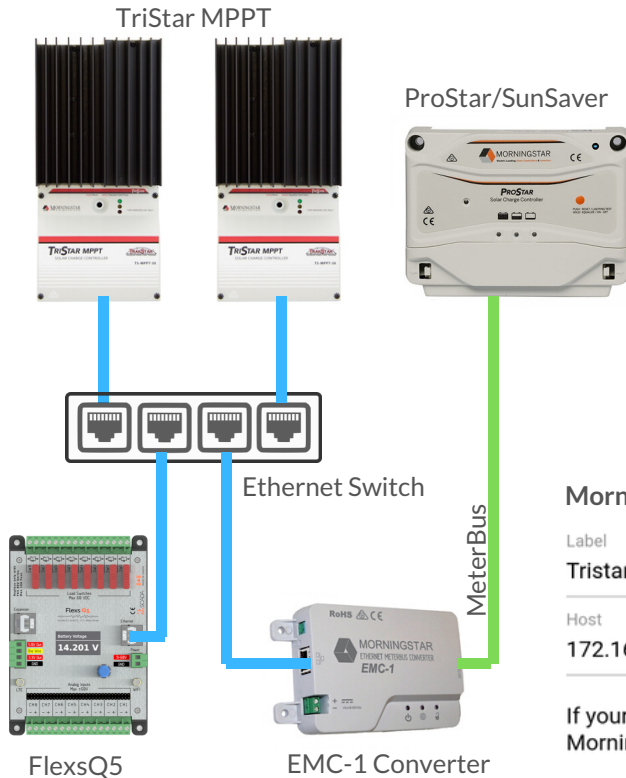

The Q5 must have access to the IP of either the EMC-1 or TriStar MPPT. The Plugin uses ModBus TCP over port 502 which must not be blocked by any firewalls. Once the hardware connections have been made the Morningstar Plugin must be enabled in Device Options menu.

☒ Morningstar Charge Controller

After the plugin has been enabled a new menu will appear in the main menu.

MorningStar
MPPT Controller Monitoring

Click the [+ ADD CHARGE CONTROLLER](#) button to add a new device; up to 32 devices can be added.

Morningstar Plugin Menu

Label

Tristar MPPT Device Name

Host

172.16.200.105 Device IP

If your charge controller does not have an ethernet port you will need to use the MorningStar Ethernet Modbus Converter Model EMC-1

Charge Controller Series


TriStar MPPT Device Series



Logging / Dashboard

- ☒ Battery Voltage
- ☒ Array Voltage
- ☒ Charge Current
- ☐ Load Current
- ☒ Charge State
- ☒ Ambient Temperature
- ☒ Battery Temperature
- ☒ Heatsink Temperature

View of charger controller on dashboard

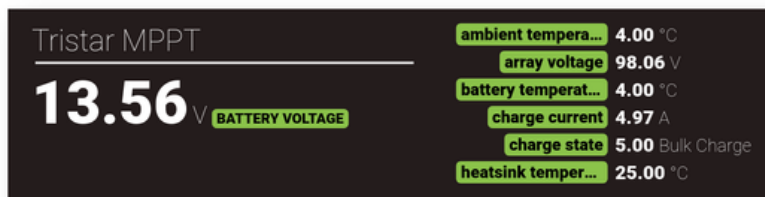

Morningstar Plugin SNMP

SNMP Must be enabled under the *Networking* menu.

☐ Disabled
☒ Enabled (Read Only)

1.3.6.1.4.1.412.11.A.B.C
Base OID

Charger ID



Tristar MPPT (id: 0)

Example: Poll the battery
volts from charger "0"

OID:1.3.6.1.4.1.412.11.0.1.1

Power Metrics

- 1: Battery Voltage;
 - 2: Array Voltage;
 - 3: Charge Current;
 - 4: Load Current;
 - 5: Ambient Temp;
 - 6: Battery Temp;
 - 7: Heatsink Temp;
 - 8: Charge State; ☐
 - 9: Last Successful Poll (Sec. Ago)
 - 10: Error Code;
- Should read 0 for success

- 0: START
- 1: NIGHT_CHECK
- 2: DISCONNECT
- 3: NIGHT
- 4: FAULT
- 5: BULK_CHARGE
- 6: ABSORPTION
- 7: FLOAT
- 8: EQUALIZE

SNMP Return Format

0: Text String

1: Numerical - SNMP does not support floating numbers. All numbers are rounded to the third decimal place and then multiplied by 1,000. For example, 24.123 would be sent over SNMP as 24,123.

Direct Modbus access to Morningstar charge controller from Scripting

```
24
25 let run = ffi('bool run(void)');
26 let waitMS = ffi('void waitMS(int)');
27
28 let getFeed = ffi('double getFeed(int)');
29 let setFeed = ffi('void setFeed(int,double)');
30
31 let mbGetStatus = ffi('int mbGetStatus()');
32
33 let mbConnect = ffi('int mbConnect(char*,int,int)');
34 let mbDisconnect = ffi('void mbDisconnect()');
35
36 let mbSetReg = ffi('void mbSetReg(int,char*,double)');
37 let mbGetReg = ffi('double mbGetReg(int,char*)');
38
39
40 while(run()){
41
42     //Connect to the Tristar
43     if(mbConnect('172.16.200.105',502,1) === 0){
44
45         //Get Scale Factor - Reg #3 - we count from reg 0
46         let iscale = mbGetReg(2,'U32ABCD');
47
48         //Success getting scale factor
49         if(mbGetStatus() === 0){
50
51             //Get raw Amps Reg #29 - we count from reg 0
52             let rawAmps = mbGetReg(28,'U16AB');
53
54             //SunSaver and ProStar Chargers use type F16AB
55             //Without the need for scaling
56
57             //Success getting raw amps
58             if(mbGetStatus() === 0){
59
60                 //Calculate Amps
61                 let amps = (iscale * rawAmps) / 32768;
62
63                 //Set custom feed 0 with amps of the solar charger
64                 setFeed(0, amps);
65             }
66
67         }
68     }
```

9.0 - Warranty Terms

The FlexsQ5 comes with a 3 year Limited Manufacturer's warranty. The FlexsQ5 Pro comes with a 5 year limited Manufacturer's warranty.

For warranty coverage the following terms and conditions apply:

- The product must have failed while operating within the specifications outlined in this document.
- Water or moisture damage is not covered.
- Physical damage to the product as a result of improper use will not be covered.
- Buyer must submit an RMA via our website showing proof of purchase.
- Buyer must ship the product to our RMA department for review.

Please contact us with any additional warranty questions.

10.0 - Security Measures

FlexSCADA takes security very seriously. Our list of high-profile users include military, government and some of the worlds largest oil companies who have all come to trust the security measures taken by our product.

The following measures have been taken to make the Q5 Secure:

- All cloud payload data is encrypted by 256 bit AES-CBC with a pre-shared key and SHA256 hashing for data integrity.
- FlexSCADA cloud can be self hosted to avoid any connections over the Internet.
- Can be used standalone without Internet access.
- Fully supports HTTPS with customer SSL Certificates.
- Our cloud data sync protocol is open to third-party security auditing.
- Device operates with a Real Time Operating System (RTOS) which means there isn't a kernel with possible security vulnerabilities.
- The FlexsQ5 employs a ST Microelectronics chipset which is designed in the US and Europe. By doing this we avoid vulnerabilities which may be hidden within foreign chipsets.
- All software and hardware development takes place within North America.

Important! Measures the customer should take to improve security:

- Change the default password to a secure password.
- Always operate the FlexsQ5 behind a firewall or on a local network
- Always use unencrypted protocols such as HTTP, SNMP, and Modbus over a secure VPN or local network.
- Secure physical access to the device to avoid local tampering.
- Setup HTTPS certificates and only access the device over HTTPS.